


User Manual

Automatic Pet Feeder

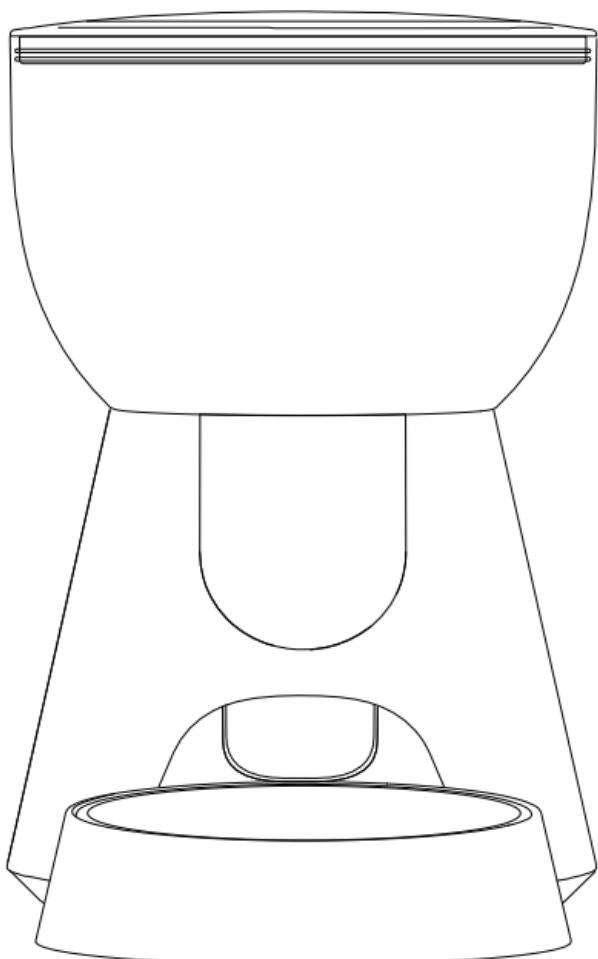

Please read the user manual carefully before using the product

Components



1.Food Hopper



2.Main Body



 
3.Top Lid




4.Food Bowl



5.Type-C Adapter



 6.Desiccant




7.Manual



8.Stainless Steel Bowl

Features

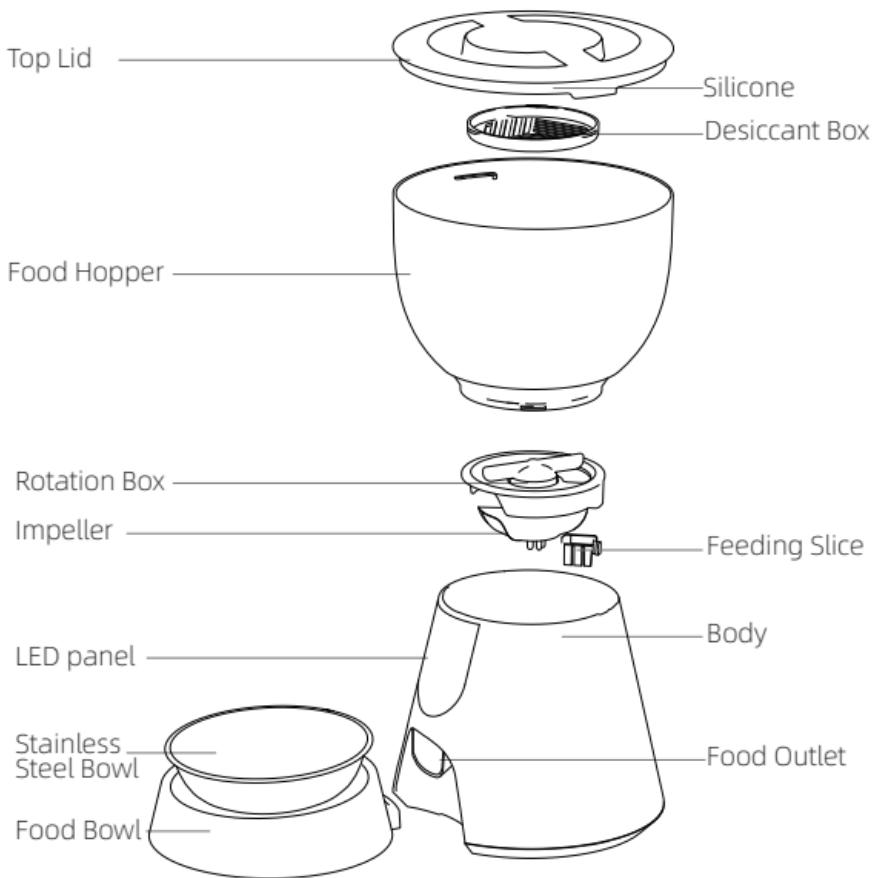


Product Introduction

Product Name	Automatic pet feeder
Product Model	F17-L
Dimension	216mm*353mm*327mm(with food bowl)
Color Box Size	225mm*225mm*270mm
Material	Food grade ABS、Stainless steel
Net Weight	About 1.45KG
Food Appliance	5~15mm dry pet food
Pets Appliance	Cats & Small size dog
Capacity	4L(around 2kg)
Power Supply	USB 5V2A/ 4*D sized batteries
Rated Voltage	USB 5V
Rated Power	5W
WiFi Connection	2.4G&5G
Working Temperature	0°~50°

Setup and Assemble Feeder


Install food hooper

Take out the food hopper and install it by aligning the slot on the base.

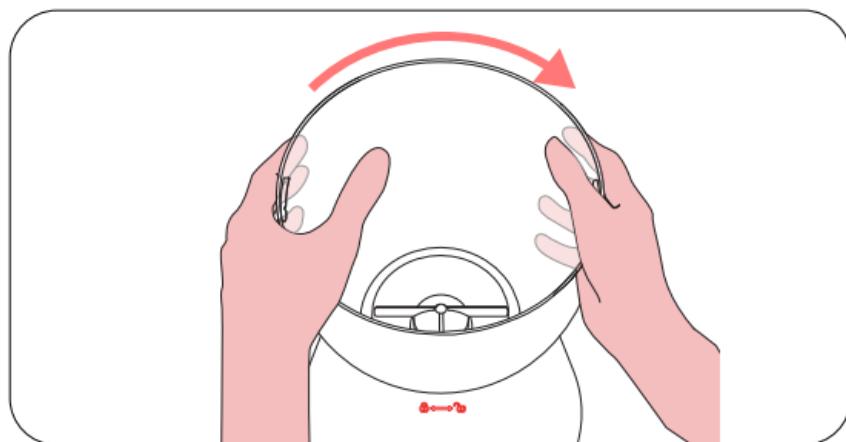

Place Desiccant

Open the desiccant box on top lid, tear off the transparent wrapping paper of the desiccant bag, place it into the box and close it.

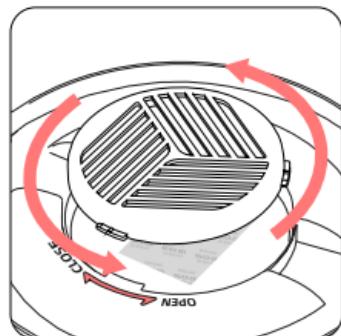

Plug in Power Adapter

①Battery power supply(APP Not Work): insert 4 alkaline "D" batteries and reinstall the battery cover.

②Power adapter supply: plug in the power adapter and connect the power cable into the card slot

***Note:** Please use safe and standard alkaline batteries. Do not mix batteries of different specifications and models.

Install the Food Bowl


Tilt the base unit back slightly, align the buckle of the food bowl with the base unit to install; the same steps to disassemble.

Fill Pet Food


Open the top lid, fill fresh dry food into the food hopper, and close the top lid.

***Note:** The device only support 5-15mm dry pet food


Grain Size Self-check:

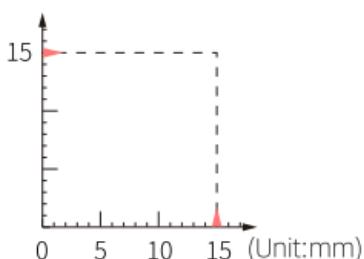


Product Introduction

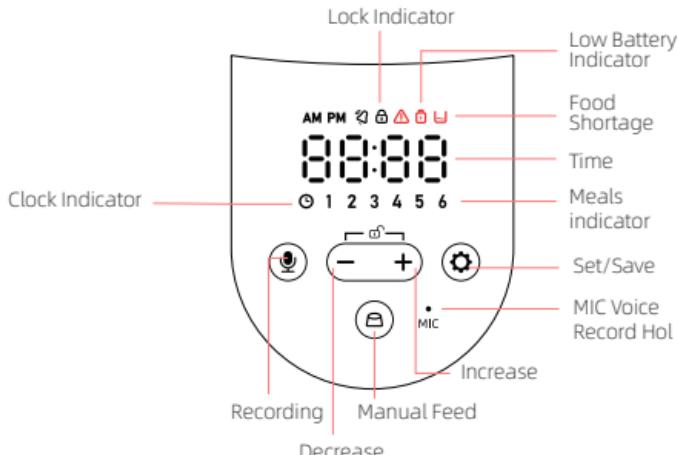

Current Time Setting

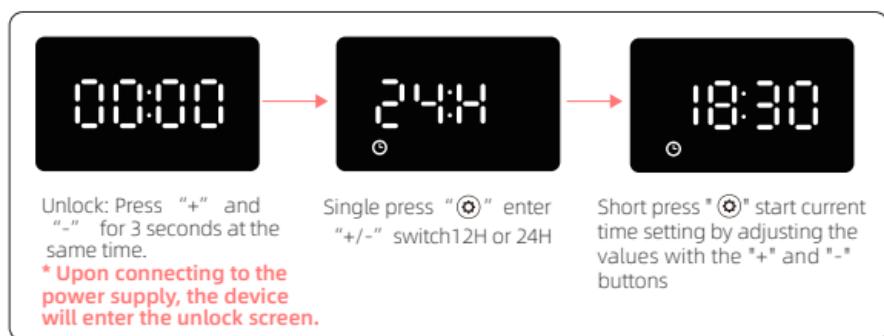

Set Feeding Schedule

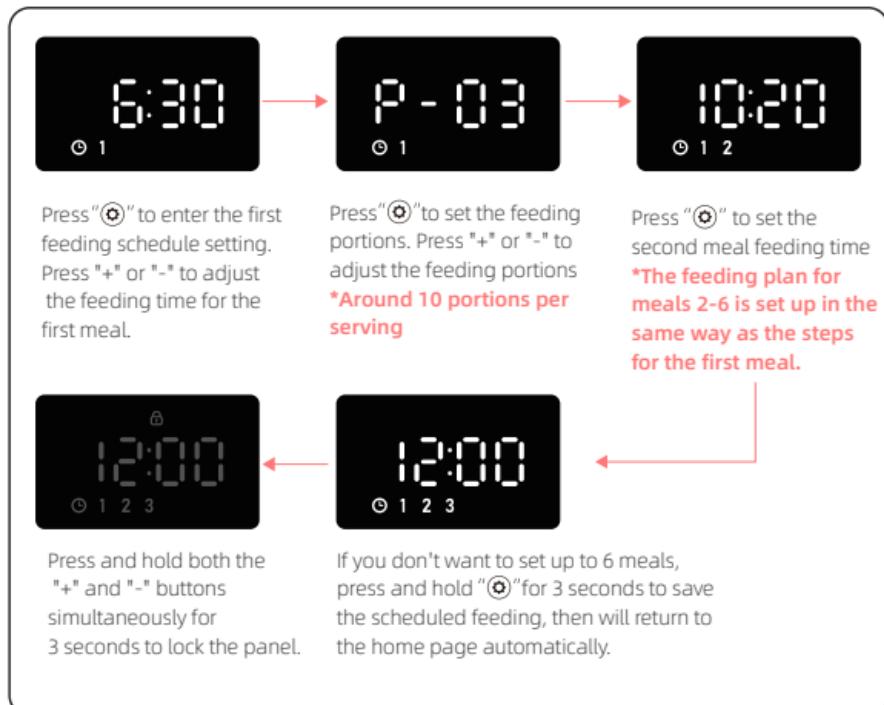

Manual Feeding

Unclock panel, short "Ⓐ" 1s to manual feeding one portion once time.

Recording

Unlock the panel, press and hold "Ⓑ" to enter recording mode, the "_MIC" indicator light is on and record voice toward the "MIC" hole for up to 10 seconds. The recording will be end with released button, then "Ⓑ" icon will be shown on the display when completed the recording.

Note: If you need to record again, repeat the above steps.

Recording Playback

Unclock panel, press "Ⓑ" to play the recording
If no recording then no voice comes out

Cancel Feeding Schedule

Set the meal time and meal size to be "00:00" and "P-00", then no feed anymore.

Default Meal Settings

Unlock the panel, press "Ⓐ" and "-" button at the same time for 3 seconds to default meal settings (delete all feeding schedules and record)

Indicator Information

Food shortage & Abnormal	Device Faulty	Low Battery
 Faulty Display: E3LA		

Device Disassemble & Clean

Power off

Unplug and take out the alkaline batteries.

Clean the Food Hopper

①To disassemble, hold both sides of the food hooper and rotate to the left and lift upwards.


②Disassemble the impeller/ feeding slice and feeding mechanism.

③The main body of the feeder is not dishwasher-safe.





④The food bowl is dishwasher-safe once removed from the main body.

Assemble the impeller

①Align the impeller with the certain position and install it at an inclined angle

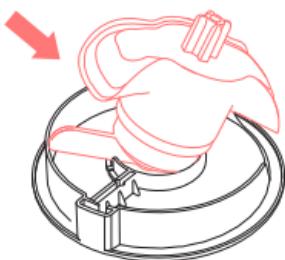

②Align the impeller as shown in the figure

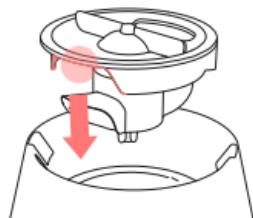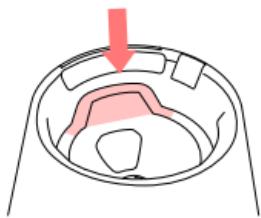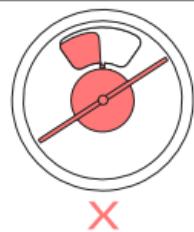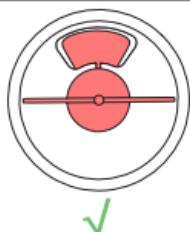

Clean the Food Bowl

Make sure all parts of the feeder are completely clean and dry before filling with food.

Clean the Body

Use the dry soft cloth to wipe it, the body is not waterproof, please do not use wet cloth.

Replace the desiccant pack

Open the desiccant box cover and replace the desiccant pack. It is suggested to replace it every one or two months.

Replace Alkaline Batteries

Unplug and open battery lid at the bottom, then you can replace the batteries.

Replace or Change the Food

Empty the food hopper, then fill the fresh food and proceed instant feeding once.

※Attention:

- ①Please keep the food hopper dry after cleaning it.
- ②Please replace the food on a regular basis if your pets did not eat up.(For time period, please refer to the food packing instruction).
- ③Please clean and maintenance your device on a regular basis to prolong the using period of your pet feeder.

Safety Precaution

Keep Plug In

1. Please check the power supply of the device before going out to ensure that the power supply is stable.
2. Please keep charging the device to make sure the wifi connection is stable.
3. The camera will turn off automatically that get into the lower power consumption mode when using dry batteries, but your feeding plan is working as the same.
4. There will no record of the feeding status and records if the device is offline.

Working Conditions

1. Place the device horizontally and securely, tilt, sway or turning upside down are forbidden.
2. Exposure to sunlight could damage the internal electronics or cause discoloration. Do not place or store an appliance where it can fall or be pulled.
3. Do not remove product components other than food bowl and hooper.
4. Do not place any foreign object in the pet feeder
5. Please make sure there is no objects on and around the food bowl to prevent pets from eating normally.

Important Safety Information

1. This product is only applicable to cats and small dogs.
2. Do not allow children to play with, in or around pet feeder.
3. The desiccant is not edible. If it is damaged, do not use it
4. The feeder is only applicable 5-15mm dry pet food.
5. Do not disassemble the pet feeder other than components as instructed in this operating guide
6. Do not immerse feeder in water, as this may damage electronic components.
7. The feeder only supports charging with 5V/2A adapter.
8. Do not allow pets to chew on or swallow any parts.
9. Do not use the pet feeder for any purpose other than feeding pets.
10. Do not touch the camera to avoid the scratches and oil stain

FAQ

What happened to your device	What happened to your device	How to solve it
Food hopper cannot be installed	Food blocked on the installation position	Clear the cat food inside the installation position and reinstall
Device Abnormal	Impurities inside food hopper	Clean the impurities inside of food hopper
	Food stuck near the food outlet	Clean the food left in the food bowl
	Food size inapplicable	Ensure to use 5-15mm dry pet food
	Infrared sensor faulty	Contact After-sale Service
	Motor Faulty	Contact After-sale Service
Lack of Food	Lack of food	Fill pet food and instant feed once
	Food hopper not fix well	Disassemble the food hopper and re-fix it.